

User Manual



SPOTTER

GPS NAVIGATOR

Dale Jr. EDITION

WELCOME

Congratulations and thank you for choosing the Spotter GPS Navigator. We hope you enjoy using this exciting product and trust that it will make your driving experience less stressful and more fun.

This guide will tell you everything you need to know about using your Spotter GPS Navigator. It will explain the basics, share some tips for operation and show you how to customize your Navigator. The following symbols refer to specific passages you should be aware of:



The caution symbol highlights items related to your safety and well-being. Please read and pay close attention to these warnings.



The exclamation point highlights helpful hints and tips for operation.



FOR YOUR SAFETY

Do not operate product while driving!

It is your sole responsibility to use the product in a safe and responsible manner.

Stay alert and pay attention to road signs!

It is your responsibility to obey local traffic laws, posted road signs and safety regulations at all times.

IN THE BOX

- Spotter GPS Navigator, Dale Earnhardt Jr. Edition
- QuickStart Guide
- Windshield Mounting System (adjustable arm with suction cup & navigator cradle)
- Car Charger
- Mini USB Cable
- Dale Jr. Bonus Material: Photos and Video Clips



Spotter GPS Navigator
Dale Jr. Edition



Quick Start Guide



Mini USB Cable



Car Charger



Navigator Cradle



Windshield Mount
(adjustable arm)

**If your box is incomplete, please contact
support@rightwaygps.com
within 14 days of purchase.**

MOUNTING YOUR SPOTTER

Your Spotter GPS Navigator can easily be secured to your windshield for optimal viewing while driving. The mounting system consists of the following pieces:

- Adjustable arm with suction cup
- Navigator cradle

NOTE: Stylus is located on the back of the Navigator cradle



Adjustable arm with suction cup



Navigator Cradle

ATTACHING THE MOUNT

- Select location for the mount on the windshield that does not obstruct the driver's view or interfere with operation of the vehicle.
- Clean and dry this area to remove any grease or dirt.
- Place the mount's suction cup on the desired location on the windshield; push the locking lever towards the base of the mount. The mount should stick to the surface.

If mount does not stick, make sure the area is clean and dry, then try again.

- Align the tabs on the mount with the slots on the Navigator cradle. Slide together until the cradle is seated firmly.
- Adjust the adjustable arm to the best viewing angle by:
 - Loosening the adjuster dials
 - Moving the corresponding part to the desired position
 - Tightening the adjuster dials

- Insert the Spotter GPS Navigator into the cradle bottom edge first. Once bottom tabs are aligned, push the top of the Spotter back until it engages the top tab of the cradle.
- To remove the Spotter GPS Navigator from the mount, gently push back the tab on the top of the cradle until the top tab disengages. Then gently pull the Spotter forward and out of the cradle.

DETACHING THE MOUNT

- Pull the locking lever away from the base of the mount.
- Grasp the pull tab of the suction cup and gently pull away from the windshield to break suction.



CAUTION!

When using navigational aids it is your sole responsibility to place, secure, and use these aids in a manner that will not cause accidents, personal injury, property damage, or in any manner obstruct your view.

In Minnesota, GPS systems can only be attached to the lower third of your windshield. (Minnesota Statute: 169.71)

CONNECTING THE CAR CHARGER

- Insert the mini-USB end of the charger into the mini-USB port of the Spotter.
- Insert the opposite end of the charger into the car's power port.

Home chargers are available at www.rightwaygps.com.

CONNECTING THE MINI USB CABLE

- Insert the USB end of the cable into an available USB port on your computer.
- Insert the mini-USB end of the cable into the mini-USB port on the Spotter.

PREPARING YOUR SPOTTER

SWITCHING ON AND OFF

- Switch **ON** your Spotter GPS Navigator by holding down the power button for 4 seconds.
- Switch **OFF** your Spotter GPS Navigator by holding down the power button until unit displays '**Powering Off**'.

FIRST-TIME SETUP

FIRST-TIME POSITION FIX

The Spotter GPS Navigator has an integrated GPS receiver. The first time you use the Spotter, the GPS receiver will take up to 10 minutes to determine your position.

SET UP COPILOT

- Tap the **Navigation** button to begin Initial set-up.
- Follow the directions on the following pages to ensure CoPilot is

configured properly.


1. SELECT LANGUAGE

- Tap the desired language from the on-screen text.

2. SELECT A VOICE

- Your Spotter GPS Navigator, Dale Jr. Edition will default to Dale Jr.'s voice.
- If you would like a different voice, tap the desired voice.

NOTE: To hear a sample of the voice you have selected, tap **Test**. Voices with an * will read street names when providing directions. (See page 34 for additional language and voice options.)

- Once selected, tap 

3. SET UNITS OF MEASURE

- Choose desired units of measure by tapping between **English/Imperial** and **Metric**.

4. SET TIME ZONE

- Scroll through the list and highlight the correct time zone. Tap **OK**.

NOTE: Scroll through the list by gently pressing the stylus to the list and do not remove pressure. Then move the stylus up and down to scroll the list. You will get the best results and smoother scrolling by using the stylus, although you can use your finger as well.

5. END USER LICENSE AGREEMENT

- Read the license agreement for CoPilot Software, tap **Accept** or **Decline**.

NOTE: Tapping Decline will take you out of the navigation software. To use the Spotter GPS Navigator, the user must agree to and accept the End User License Agreement.

6. HOW TO SCROLL

- Read the on-screen how to scroll directions and tap



7. WARNING

- Read warning and tap **Accept**.



GPS Signal: GPS signal will be limited or blocked inside buildings, tunnels, and parking garages. To work effectively the Spotter GPS Navigator should be mounted in the supplied windshield mount with a clear line of sight to the sky.

 


You are now ready for your first trip!

ON SCREEN INFORMATION

The Spotter GPS Navigator will guide you to your destination with spoken directions as well as clear on-screen instructions. Your screen will look similar to the one below. By default your current location is displayed at the bottom of the map. See the Guidance section on page 42 to learn how to modify the information displayed.

- | | | | |
|---|-------------------------|----|-----------------------|
| 1 | ETA | 6 | Approaching Turn |
| 2 | Distance to Destination | 7 | Current Position |
| 3 | Next Turn Direction | 8 | Driving View Shortcut |
| 4 | Distance to Next Turn | 9 | Route Ahead Highlight |
| 5 | Information Options | 10 | Demo Controls Button |

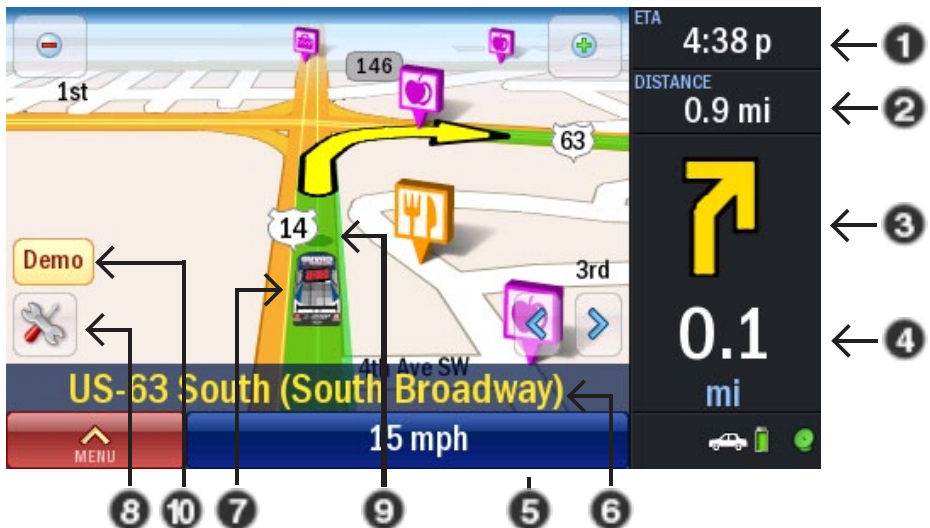

DESTINATION

 
The Spotter GPS Navigator uses GPS satellites to calculate your exact position so you do not need to enter your current location. Simply enter your destination and the Spotter GPS Navigator will provide detailed voice and on-screen instructions to get you there.

ADDRESS

- Tap **Menu > Destination > Address**.
- Enter the city/town name or zip code of your destination.
- Scroll through the list by gently pressing the stylus to the list and do not remove pressure. Then move the stylus up and down to scroll the list. You will get the best results and smoother scrolling by using the stylus, although you can use your finger as well.



- Tap the correct city or area when it appears in the list below the city field.
- Do not enter the house/building number yet.
- Enter the first three or four letters of the street name. Select the correct street name when it appears.

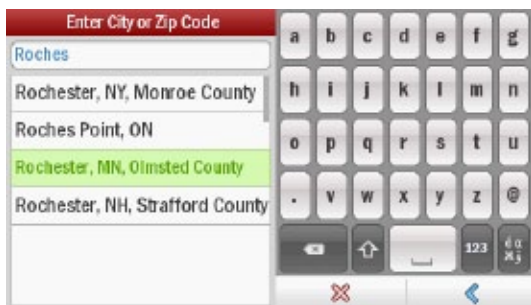

- Enter the house/building number, select it, and tap **GO**.

LOCATE POINTS OF INTEREST



The Spotter GPS Navigator not only guides you to your destination, but also knows all the useful places you might need on your journey.

- Tap **Menu > Destination > Points of Interest**.
- Select the desired search location: **Nearby, In different city, or On my route**:

NEARBY

- Tap **Menu > Destination > Points of Interest > Nearby**.
- Tap desired category. (If category of choice does not appear, tap **More Categories** on the lower right screen to display more options. Or, search by POI name by tapping the lower left **Search by Name** tab.)

For example tap Gas Station for a list of nearby gas stations organized by distance from your location.

- Scroll through the list. Gently press the stylus to the list and do not remove pressure. Then move the stylus up and down to scroll the list. You will get more precise results and smoother scrolling by using the stylus. Once you have found the desired POI, tap the POI to select it.
- A details page will be displayed with POI address and map. Tap **GO**.
- Confirm destination by tapping **GO**.

IN DIFFERENT CITY

- Tap **Menu > Destination > Points of Interest> In a Different City.**
- Enter the city/town name or zip code of your destination.
- Scroll through the list. Gently pressing the stylus to the list and do not remove pressure. Then move the stylus up and down to scroll the list. You will get more precise results and smoother scrolling by using the stylus. Once you have found the desired POI, tap the POI to select it.
- Tap desired category. (If category of choice does not appear, tap **More Categories** on the lower right screen to display more options. Or, search by POI name by tapping the lower left **Search by Name** tab).

For example tap Gas Station for a list of gas stations in the desired city/town organized by distance from the city/town center.

- Scroll through the list of POIs. Note that the distance listed here is measured from the approximate center of the city, not from your current location. Once you've found the desired POI, tap the POI to select it.
- A details page will be displayed with POI address and map. Tap **GO**.
- Confirm destination by tapping **GO**.

ON MY ROUTE

- Tap **Menu > Destination > Points of Interest> On My Route.**
- Tap desired category. (If category of choice does not appear, tap **More Categories** on the lower right screen to display more options. Or, search by POI name by tapping the lower left **Search by Name** tab.)

For example tap Gas Station for a list of gas stations along your route.

- Scroll through the list. Gently press the stylus to the list and do not remove pressure. Then move the stylus up and down to scroll the list. You will get more precise results and smoother scrolling by using the stylus. Once you have found the desired POI, tap the POI to select it.
- A details page will be displayed with POI address and map. Tap **GO**.
- Confirm destination by tapping **GO**.

PICK ON MAP



- Tap on **Menu > Destination > Pick on Map**.
- A map of the area around your current location will be displayed. Drag the screen to move around the map and tap your desired destination when you find it. If needed, use the + and – signs in the upper corners to zoom in and out.
- Confirm destination by tapping **GO**.


INTERSECTION



- Tap on **Menu > Destination > Intersection**.
- Enter the name or zip code of the city on the keypad. Select the destination from the list when it appears.
- Enter the first three or four letters of the first street name. Select the street name from the list when it appears.
- A list of all known intersecting streets will appear. Select the desired cross street from this list.
- Confirm destination by tapping **GO**.

COORDINATES



- Select **Menu > Destination > Coordinates**.
- Select the format of your coordinates: **Degrees Minutes Seconds, Decimal Degrees** or **Decimal Minutes**.
- Enter a latitude and longitude in the selected format. Tap 



The Spotter GPS Navigator will take a few moments to find the point. When the point has been located, a map will appear with the location pinpointed by a red flag.

- Confirm destination by Tapping **GO**.

MY PLACES

Save your home, work, recent and favorite addresses so you don't have to enter them every time.

HOME



- Tap on **Menu > My Places > Home**.
- Enter the city/town name or zip code of your home location.

- Scroll through the list by gently pressing the stylus to the list and do not remove pressure. Then move the stylus up and down to scroll the list. You will get the best results and smoother scrolling by using the stylus, although you can use your finger as well.
- Tap the correct city or area when it appears in the list below the city field.
- Do not enter house/building number; you will enter this on the next step
- Enter the first three or four letters of the street name. Select the correct street name when it appears.
- Enter the house/building number. Select the correct address when it appears.
- Confirm destination by tapping **GO**.

WORK



- Tap on **Menu > My Places > Work**.
- Enter the city/town name or zip code of your work location.
- Scroll through the list by gently pressing the stylus to the list and do not remove pressure. Then move the stylus up and down to scroll the list. You will get the best results and smoother scrolling by using the stylus, although you can use your finger as well.
- Tap the correct city or area when it appears in the list below the city field.
- Do not enter house/building number; you will enter this on the next step.
- Enter the first three or four letters of the street name. Select the correct street name when it appears.
- Enter the house/building number. Select the auto-filled address to continue.
- Confirm destination by tapping **GO**.

RECENT




- Tap on **Menu > My Places > Recent**.
- Scroll through the list and tap the desired recent location.
- Confirm destination by tapping **GO**.

FAVORITES



- Tap on **Menu > My Places > Favorite**.
- Scroll through the list by gently pressing the stylus to the list and do not remove pressure. Then move the stylus up and down to scroll the list. You will get the best results and smoother scrolling by using the stylus, although you can use your finger as well.
- Tap desired location.
- Confirm destination by tapping **GO**.

TO ADD NEW FAVORITE

- Tap on **Menu > My Places > Favorite >** 
- Repeat address entry steps from destination section on page 10.

QUICK STOP




Quick Stop helps you to quickly and easily locate a nearby gas station, restaurant, or hotel. For example, when travelling on a long journey you can use the Quick Stop feature to help you search for a local hotel, find their number, and call them using your phone.

- Tap **Menu > Quick Stop**.

- Tap desired category from quick stop list: Gas Station, Restaurant, Hotel or Vehicle Repair.

- Scroll through the list by gently pressing the stylus to the list and do not remove pressure. Then move the stylus up and down to scroll the list. You will get the best results and smoother scrolling by using the stylus, although you can use your finger as well. Tap the desired quick stop.



- Tap **Show Map** to display all nearby facilities on a map. To return to the facilities list, select **Show List**.
- Tap **Search by Name** to type the name of a facility, and select the one you want when it appears in the list. For example, to look for a specific hotel, begin to type 'Hil' then select 'Hilton' to add this hotel as a destination.
- Tap  to stop searching for facilities.

DETOUR

You can program your Spotter GPS Navigator to make a detour, avoiding part of the calculated route.

ALTERNATE ROUTE

If you are unhappy with the whole route your Spotter GPS Navigator has planned for you:

- Tap **Menu > Detour > Alternate Route**.



The Spotter GPS Navigator will compile a different route if a sensible alternative exists. A map of the proposed detour will be displayed. Tap **Accept** to agree or **Decline** to return to the previous route.

END DETOUR

If you are on a detour route and would like to return to the original trip.



- Tap **Menu** > **Detour** > **End Detour**.

AVOID ROADS

- Tap **Menu** > **Detour** > **Avoid Roads**.
- An itinerary of your trip will appear. Tap on the road you would like to avoid.



The Spotter GPS Navigator will take a few moments to plan an alternate route avoiding the selected road. It will display any change in distance and/or ETA of the new route as well as a map of the new route.

 


- Tap **Accept** and the Spotter GPS Navigator will begin directing you according to the new route.
- If you decide not to use the new route, tap **Clear** and try another route, or tap **Cancel** to return to your original route.

CLEAR AVOIDED ROADS

The Spotter GPS Navigator will save the details of roads you wish to avoid until you reach your destination. To clear the memory prior to reaching your destination:

- Tap Menu > Detour > Clear Avoided Roads.

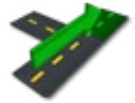


PLAN OR EDIT TRIP

ADD STOP: ENTERING MULTIPLE DESTINATIONS

The Spotter GPS Navigator allows you to plan a trip with up to 50 destinations in one itinerary.

- Tap Menu > Plan or Edit Trip > Add Stop.

 - Tap on how you want to enter your destination:
Address, My Places, Points of Interest, GPS Location, Pick on Map, Intersection, Coordinates or Return Trip.

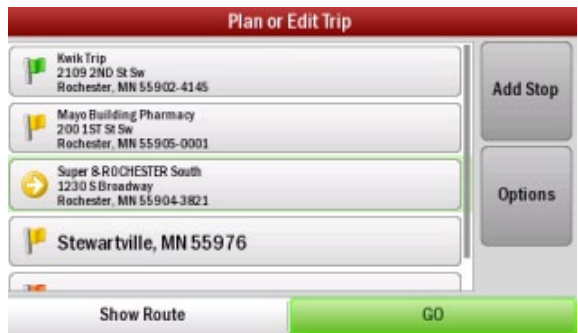

NOTE: Once you have completed your trip, you can use the Spotter GPS Navigator to guide you on your return.

- Add the first destination. (See the Destination section on page 10 for more detailed information.)
- When you return to the Plan or Edit trip screen, repeat these steps to add additional destinations.
- Once all destinations are entered, you may tap **Show Route** to preview your route, **GO** to start driving or customize and save your trip.

EDIT STOP POP-UP MENU

Select a destination on your itinerary and a pop-up menu will appear. This menu is where you can make changes to your itinerary.

CHANGE TRIP ORDER

When you have entered all your destinations you can change the order they appear in your itinerary.

- Tap the address you wish to move. A pop-up menu will appear containing a list of Edit Stop options:



Move to Top



Move to Bottom



 
Move Up



Delete



Move Down

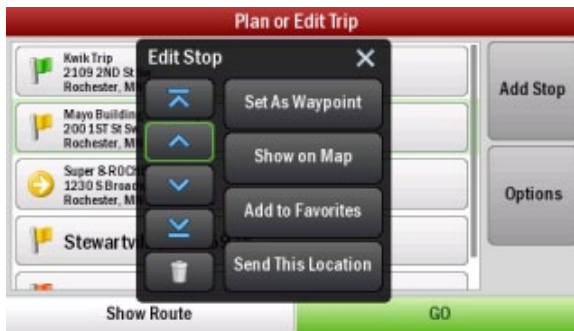


- Tap the desired option. The selected stop will move to its new position in the trip list.


SET AS WAYPOINT

The Spotter GPS Navigator can route you through a certain point without considering it as a stop. By setting Waypoints you can adjust the Spotter GPS Navigator's route to calculate a detour via the waypoint.

 - Tap **Menu > Plan or Edit Trip.**
- Enter the waypoint address or destination in the same way detailed in Selecting a Destination starting on page 10.

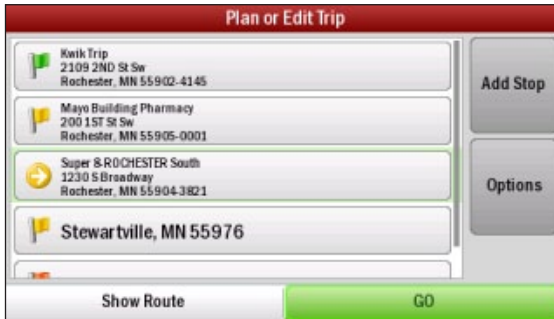

 
- The address will appear on the trip list as a stop, with a flag icon next to it.
- Tap the address and a pop-up menu will appear containing a list of options. Tap **Set as Waypoint.**

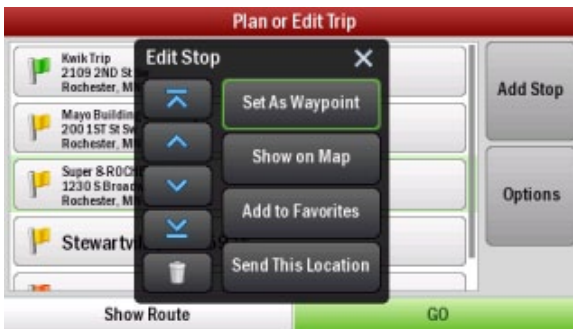

- The address will now be listed as a Waypoint, with an arrow icon rather than a flag to indicate that it is a Waypoint.

SHOW ON MAP

- From the Plan or Edit Trip screen, select a stop.
- Tap **Show on Map** from the pop-up menu to view a map of the area around the stop.
- Tap  to return to the trip list.

ADD TO FAVORITES

- Tap **Add to Favorites** to save the selected destination to favorites.
- The Spotter will confirm the destination is saved in favorites. Tap **OK**.

SEND TO LOCATION

This feature is not yet available on this model. It was included so your unit would be programmed to accommodate this if and/or when it becomes available.

OPTIONS: CUSTOMIZING YOUR TRIP

SAVE TRIP

When you have finished entering all your destinations, you can save your trip to access at a later date, rather than start driving right away.

- From the Plan or Edit Trip screen, tap **Options > Save**.
- Enter a name for the trip you are saving.
- Tap **OK** and your trip will be saved.

LOAD SAVED TRIP

- From the Plan or Edit Trip screen, tap **Options > Load**.
- Select the trip that you would like to load from the list, then tap **Open**.
- The trip will appear on the Plan or Edit Trip screen where you can choose to **Add Stops, Show Route** or **GO**.

CLEAR A PLANNED TRIP

The Clear option will clear the currently planned trip. It does **NOT** delete saved trips.

- From the Plan or Edit Trip screen, tap **Options > Clear**.
- A Warning - Are you sure? pop-up will appear. Select **Yes** to continue clearing the current trip.
- You will be returned to a blank itinerary on the Plan or Edit Trip screen.

SHOW ROUTE

- From the Plan or Edit Trip screen, tap **Show Route**.
- Select the routing type: **Quickest, Shortest, Avoid Expressways** or **Economic**.
- Use the up and down arrows to indicate your preference for Toll Roads.
- Check the box next to “Don’t show this message again” if you do not wish to select routing type each time you plan a trip.
- When all selections have been made, tap **OK**.
- The Route screen will appear. Tap **Preview** to view your route, **Options** to change routing type, **Edit** to make changes to the route, or **GO** to start driving.

DELETE SAVED PLANNED TRIP

The Delete option will permanently remove a planned trip from the Spotter's database.

NOTE: You will **NOT** be asked to confirm this selection.

- From the Plan or Edit Trip screen, tap **Options > Load**.
- Select the trip that you would like to delete from the list, then tap **Delete**.

OPTIMIZE STOPS



The Spotter GPS Navigator has an Optimize Stops function which will automatically re-order the stops within a trip to create the most efficient route. When you have planned a trip with more than 3 stops:

- From the plan or edit trip screen, tap **Options > Optimize Stops**.
The Spotter GPS Navigator will take a few seconds to reorder your stops for the most efficient journey.

NOTE: Your starting point and final destination will not be altered. However, if you want the final destination to be included in the optimization, select **Options > Take Breaks > check Optimize Final Destination**.

FUEL COSTS ESTIMATE

The Spotter GPS Navigator has the ability to estimate fuel costs for a trip.

- From the Plan or Edit Trip screen, tap **Options > Fuel Cost > check Show Estimated Fuel Cost**.
- Enter the average miles per gallon (average MPG) for your car.
- Enter average cost per gallon.
- Use the   keys to select the currency, then tap **OK**.



TAKE BREAKS

The Spotter GPS Navigator can alert you to take a break at regular intervals during a trip.

- From the Plan or Edit Trip screen, tap **Options** > **Take Breaks** > check **Take breaks during trip**.
- **Break Every**: Select how often you would like to take a break using the up and down arrows.
- **Break For**: Select the length of your breaks using the up and down arrows.
- Tap **OK**.

DRIVING VIEWS

The Spotter GPS Navigator can be customized to meet your individual needs and style. You can choose from six different driving views. To access:

- Tap **Menu** >  > **Driving Views** to choose from all six views or tap the  (driving views shortcut button) to quickly access four of the six views.

3D VIEW

 
The 3D view displays your current position, next turn and surrounding roads using a bird's eye view.



2D VIEW



The 2D view displays your current position as if you were directly overhead. You may use this view to see more of your surrounding area than with the 3D view.

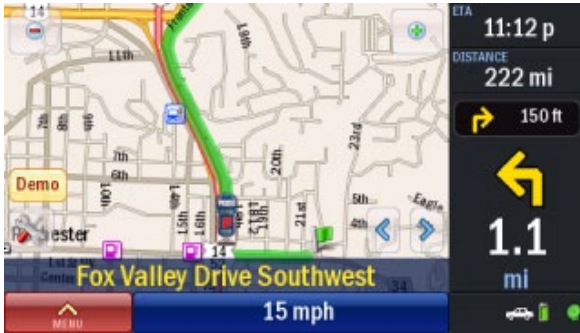

DRIVER SAFETY



 
The Driver Safety view displays a turn instruction arrow with concise next turn instructions in large type. In driver safety mode, a map is only displayed as you approach a turn or are traveling below 10 mph. We recommend you choose Driver Safety.



ITINERARY




The Itinerary view shows each direction and turn in a written list, including distances.

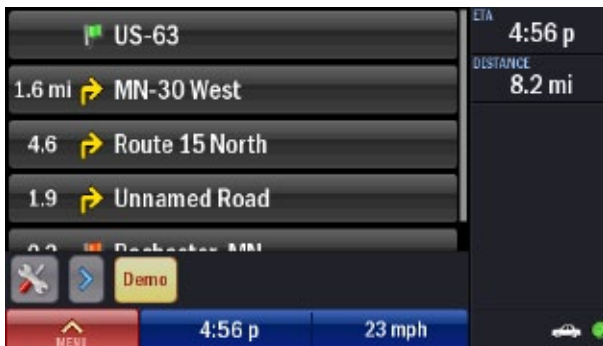

THE 2D NEXT TURN



 
The 2D Next Turn view displays your current location and auto zooms into the next turn on a 2D map.

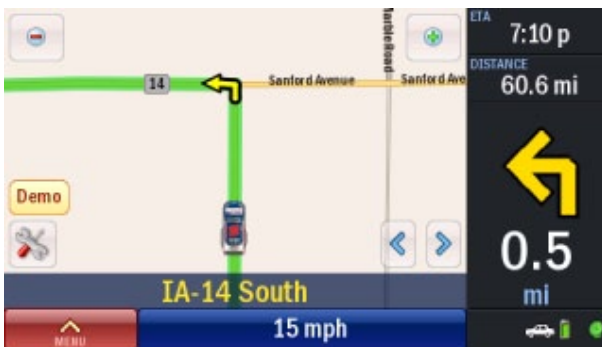

2D DESTINATION



 The 2D Destination view displays your current location and auto zooms into the destination on a 2D map.

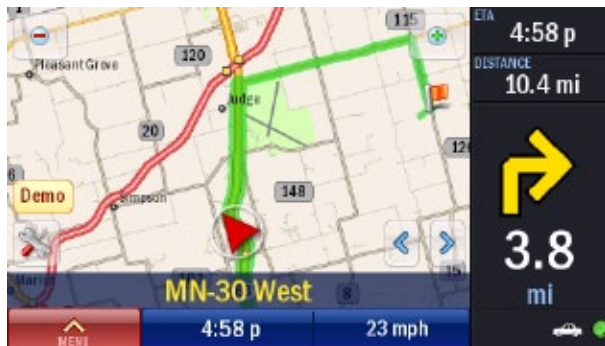



DAY MAP/NIGHT MAP



Lets you choose between a regular map for daytime driving and a map with a dark background that reduces glare for easier nighttime viewing.



  NOTE: Overrides automatic day/night mode. If you choose Day Map or Night Map from the Driving Views menu, please see the **Day/Night Mode** section on Page 35 to turn automatic switching back on.

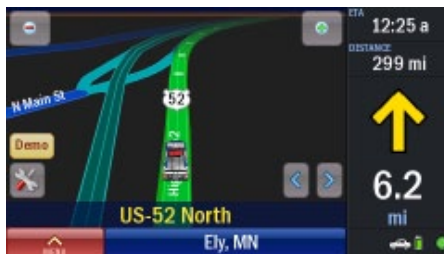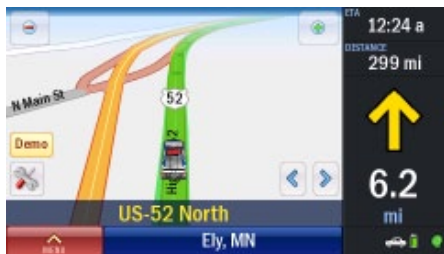


SETTINGS

The Spotter GPS Navigator can be customized to meet your individual needs and style.




ROUTING








You can set up your routing preferences to best suit you.

- Tap **Menu** >  > **Settings** > **Routing**.
- Tap one of the New Routing Profile options: **Automobile**, **Motorcycle**, **Bicycle**, **Walking** or **RV**.

When option is selected, tap 

- Use the   keys to indicate your road preferences (**strongly avoid**, **avoid**, **neutral**, **favor**, **strongly favor**) and speed for **Freeways**, **Divided Highways**, **Primary Roads**, **Secondary Roads**, and **Local Streets**. When finished, tap 


NOTE: Adjusting these values can have a severe effects on the choice of route the Spotter GPS Navigator makes for you. If you're not sure, leave the values at default.

- Select your preference for Toll Roads: **Always Avoid**, **Avoid if Possible**, or **Use**. When option is selected, tap 
- Select routing preferences by checking or unchecking **Avoid Ferries**, **Scenic Route**, **Avoid Propane-Restricted Tunnels**, and/or **International Borders Open**. When options are selected, tap 
- Select **Quickest**, **Shortest**, **Avoid Expressways** or **Economic** routing type and tap 
- Save profile - This step is **OPTIONAL** - To save profile enter a profile name and tap . Or, skip step and tap  to continue.

MAP STYLES



Spotter GPS Navigator offers a range of map styles to select from.

- Tap **Menu** >  > **Settings** > **Map Styles**.

To set a map style for the daytime, use the **Day** map style by toggling the up and down arrows.

To set a map style for the nighttime, use the **Night** map style by toggling the up and down arrows.



The Spotter GPS Navigator will automatically switch between the day and night map styles you have selected when it starts to get light or dark outside.

NOTE: If you have chosen Day Map or Night Map from the Driving Views menu, please see the **Day/Night Mode** section on Page 35 to turn automatic switching back on.

MAP DISPLAY




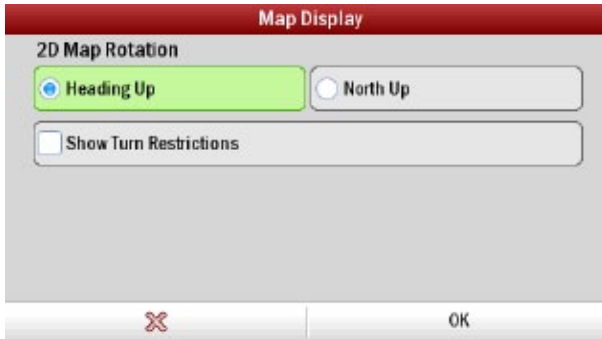 
The Spotter GPS Navigator has three map display options:

- **Heading Up:** you will always be travelling upwards on the screen

- **North Up:** holds the map static as you travel along your route.
- **Show Turn Restrictions:** choose to display turn restrictions by checking or un-checking the box.

To adjust the map display to your preference:


- Tap **Menu** >  > **Settings** > **Map Display**.
- Select either **Heading Up** or **North Up** for your map orientation.



- Indicate your preference for Show Turn Restrictions by checking or unchecking the box.
- Tap **OK** to apply the settings and return to the Settings menu.

GPS POINTER

You may change what picture represents you on the map.

- Tap **Menu** >  > **Settings** > **GPS Pointer**.
- Choose which pointer you would like to use.
- Tap **OK** to apply the setting and return to the Settings menu.

 
GPS



To check the GPS Status:

- Tap **Menu** >  > **Settings** > **GPS**.

The GPS Status screen shows detailed information regarding the GPS fix and signal strength which your Spotter GPS Navigator uses for guidance. From this screen you can see your current latitude or longitude position in decimal degree format, the UTC time and date, your speed and your elevation.

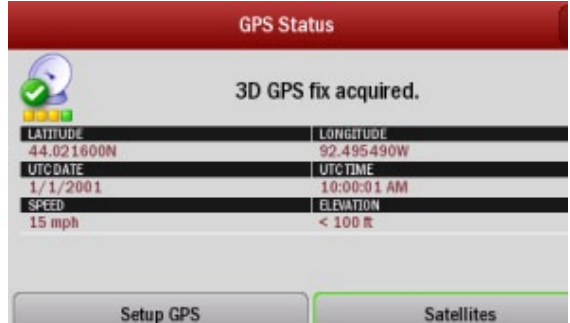


DO NOT USE the GPS Setup menu without direction from Technical Support. The Spotter GPS Navigator is ready out of the box and does not require GPS setup. Changing options in GPS Setup without direction from Technical Support may compromise the Spotter's ability to receive GPS signals.

To check the GPS Satellites:

- Tap **Menu** >  > **Settings** > **GPS** > **Satellites**.

 The GPS Satellites screen displays satellite signal strength and the type of GPS fix acquired.

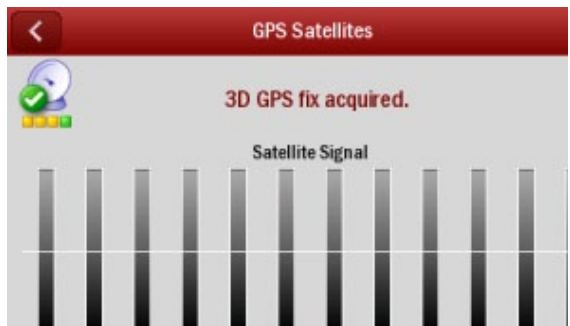

NOTE: Your GPS signal will be limited or blocked when the receiver is inside buildings, tunnels, or garages. To work effectively the GPS receiver needs to have a clear line of sight to the sky.



POI DISPLAY







You may choose which POIs to display on the map and how you would like them displayed.

- Tap **Menu** >  > **Settings** >  > **POI Display**.
- Tap box to choose to show POIs **Always**, **Never**, or **When Stopped**.
- To see or change which POI categories should be shown on the map, select **Currently Displayed POIs**.
- Select the specific POI categories to display by checking the boxes, then tap **OK**.
- Tap **OK** to apply the settings and return to the Settings menu

TURN WARNINGS







The Spotter GPS Navigator will warn you when you are approaching a turn either at 2 miles, 1 mile, 3/10th of a mile, or at the turn.

- Tap **Menu** >  > **Settings** >  > **Turn Warnings**.
- Check the boxes to choose when you would like to hear turn warnings.
- You can also choose how many seconds before a turn you want to be warned. Toggle seconds by tapping  
- Tap **OK** to apply the settings and return to the Settings menu.

CLEARTURN™

CoPilot ClearTurn™ provides a virtual view at complex interchanges and freeway exits. The real sign post information and visual instructions displayed on the road highlight the turn and lane you need. ClearTurn™ is only available in 3D driving views.





- Tap **Menu** >  > **Settings** >  > **ClearTurn™**.
- Check the **Display ClearTurn Near Exits** box to enable ClearTurn™.
- Use the   arrows to change the distances at which the ClearTurn™ graphics are shown and hidden, respectively.

LANGUAGE & VOICE



You may select the language used for all text and spoken instructions.

NOTE: If you change to another language or voice, you will need to re-select Dale Jr. from the **US English** language in order to hear him again.

- Tap **Menu** >  > **Settings** >  > **Language & Voice**.
- Tap the desired language for on-screen text.
- Tap **OK** to apply the settings.
- Tap the desired voice. Voices with an * will read street names when providing spoken directions. Tap **OK**.
- Tap **OK** to apply the settings and return to the Settings menu.

DAY/NIGHT MODE





Choosing Day or Night will force your Spotter GPS Navigator to use the Day or Night map style you selected (see page 28). Selecting Automatic will allow your Spotter GPS Navigator to automatically switch between Day and Night map styles at the appropriate time of day.

- Tap **Menu** >  > **Settings** >  > **Day/Night Mode**.

UNITS OF MEASURE






To set your preferences for the type of units used in maps and instructions:

- Tap **Menu** >  > **Settings** >  >  > **Units of Measure**.
- Tap **English/Imperial** or **Metric**.
- Tap **OK** to apply the settings and return to the Settings menu.

BACKLIGHT



Adjust your device's backlight settings to save battery power.




- Tap **Menu** >  > **Settings** >  >  > **Backlight**.
- Tap **On with GPS**, **Always On**, **On Near Turn**, or **Use Device's Settings**.
- Tap **OK** to apply the settings and return to the Settings menu.

INFO BAR



Once you've planned a journey and selected **GO**, your Spotter GPS Navigator will display a driving view with useful information about your journey in the Info Bar at the base of the screen.

You can decide how the information bar should be displayed and select what information is shown.

- Tap **Menu** >  > **Settings** >  >  > **Info Bar**.
 - **Single Display** - Shows only one of the information options, for example your estimated time of arrival at a destination.
 - **Dual Display** - Lets you select two information options, for example your estimated time of arrival and distance remaining to destination.
 - **Loop Single Display** – Cycles through all options one after the other.
- Decide from the following options what information is to be displayed.

Destination

Nearest Crossroad

Estimated Time of Arrival

Estimated Travel Time

Altitude

Heading

Current Road

Nearest Town

Speed

Distance Remaining

Latitude/Longitude

- Tap **OK** to apply the settings and return to the Settings menu.



You may also change the info bar by tapping it when it is displayed below your current position.




TIME ZONE

- Choose desired time zone by scrolling through the list, then tap **OK**.

SOUND

To adjust the sound of the Spotter GPS Navigator:














- Tap **Menu** >  > **Settings** > **Sound**.
- Increase and decrease the volume using the  and  arrows.
- Un-check the **Button Click Sounds** box to turn off click sound when you touch the screen.
- Select box to **Mute** sound.
- You will hear a “Welcome to CoPilot” greeting when you launch your Spotter GPS Navigator. Un-check **Say Welcome to CoPilot** to stop the greeting.
- Tap **OK** to apply the settings and return to the Settings menu.

PLAY DEMO



You can watch a demonstration to see how the Spotter GPS Navigator can guide you on your journey.

- Tap **Menu** >  > **Settings** >  >  >  > **Play Demo**.
- Tap the  icon on the map to open a panel of buttons that let you control the demo or track playback.
- Tap **Slower** or **Faster** to control the speed of the demo.
- Tap  to go back to the beginning of the demo or track.
- Tap  to go back to the most recent turn.

- Tap  to pause.
- Tap  to forward to the next upcoming turn.
- Tap  to close the demo or track.
- Tap  GPS Tracks to play back a previously completed trip.
 - Select the trip from the Track Playback list.
 - Tap **Play** to start playback.



ABOUT COPILOT



To access the version and data number of your CoPilot software:





- Tap **Menu** >  > **Settings** >  >  >  > **About CoPilot**.

RESTORE DEFAULT SETTINGS



You can clear all your setting and reset the Spotter GPS Navigator to the factory settings.

NOTE: Restoring default settings will NOT removed your favorites or recent locations.

- Tap **Menu** >  > **Settings** >  >  >  > **Restore Default Settings**.
- You will be asked to confirm the reset. Tap either **Cancel** to return to the settings menu or **OK** to continue.
- The navigation software will close and you will be returned to the Spotter GPS Navigator's main menu.
- When next starting the software, your old settings will be cleared and you will be prompted through the initial set-up process.

SHOW MORE SETTINGS



The first time you start the Spotter GPS Navigator, the settings for some of the more advanced features will be hidden. To view the hidden settings:

- Tap **Menu** >  > **Settings** >  >  >  > **Show More Settings**.

The following additional settings will now be displayed:

POI Alerts

Manage POIs

Guidance







Speech

Routing Profiles

GPS Track Playback

Data Region



Licensing

- To hide additional settings tap **Menu** >  > **Settings** >  >  >  >  >  > **Show Fewer Settings**.

ADVANCED SETTINGS

POI ALERTS



This option is only visible when Show More Settings is selected from the Settings menu. You can choose which POI categories should be displayed on screen and set the distance at which you would like to be informed about them.

- Tap **Menu** >  > **Settings** >  > **POI Alerts**.
- To display POI alerts, check the box **Show POI Alerts**.
- Use the up and down arrows to set how many miles in advance you would like your Spotter to look for POIs.
- Select whether to show POIs that are **On Route** or **Near Route**.
- Tap **POIs to Alert** to select the POIs displayed on the map, then tap **OK** to return to the POI Alert screen.
- When the POI Alert screen is complete, tap **OK** to apply the settings and return to the settings menu.

MANAGE POIS



This option is only visible when Show More Settings is selected from the Settings menu. The Spotter GPS Navigator lets you add new POIs and create new POI categories.

 
- Tap **Menu** >  > **Settings** >  > **Manage POIs**.
- Choose either **Edit POIs** or **POI Sets**.

Edit POIs






ADD POI

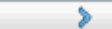- From the **Manage POIs** screen, tap the **Add** button.

- Select what you will be adding to your POI database: **Address, GPS Location, Pick on Map, Intersection, Coordinates, or Return Trip.**
- Enter the information in the corresponding format. (i.e. If you add an address, you will need to enter an address. If you add coordinates, you will need to enter the coordinates.)
- Select a POI category for your new POI by tapping on the category or creating a new category, then tap 


To Create a New Category:

- Tap **New Category** button.
 - Enter a name for the category you are saving and tap 
 - Tap image you would like your new category to be displayed as and tap 
 - Enter a name for the Place you are saving and tap **Continue.**
- If prompted, select a Type or create New Type and tap 

To Create a New Type:

- Tap **New Type** button
 - Follow steps for creating new category above.
- Enter a name for the POI you are adding. If desired, tap **Add Details** to include additional information such as a phone number. Tap **Continue** to return to the Manage POIs screen.

EDIT POI

- From the Manage POIs screen, select the POI to be modified, then tap the **Edit** button.
- To change the category of a POI, tap the desired new category or tap **New Type** to create a category. Tap 
- Change the name of the POI if desired. Tap **Continue** to return to the Manage POIs screen.

DELETE POI

- From the Manage POIs screen, select the POI to be deleted, then tap the **Delete** button.

NOTE: You will not be asked to confirm the POI to be deleted.

Edit POI Sets



This feature allows you to manage and edit POI data sets either created by yourself or purchased and downloaded to your Spotter GPS Navigator through CoPilot Central.

- Select the data list that you want to adapt and press the **Edit** button. You can edit a specific record or add another record following the same steps outlined in **Edit POIs**.

GUIDANCE



This option is only visible when Show More Settings is selected from the Settings menu. You can adjust the way your Spotter GPS Navigator guides you.

- Tap **Menu** >  > **Settings** >  > **Guidance**.

To decide the adjustments, choose from the following:

- **Turn After Next Distance** - Your Spotter GPS Navigator will show you the turn that closely follows your current next turn. Use the arrows to select at what distance you would like the Spotter GPS Navigator to look ahead for this following turn.
- **Walking Mode** - When you are using your Spotter GPS Navigator while walking, check Display Breadcrumb to show a dotted line between your start and end destinations to help you navigate.
- Tap **OK** to apply the settings and return to the Settings menu.

SPEECH



This option is only visible when Show More Settings is selected from the Settings menu. The Spotter GPS Navigator provides help by speaking prompts such as “enter city or zip code.”



- Tap **Menu** >  > **Settings** >  >  > **Speech**.

ROUTING PROFILES



This option is only visible when Show More Settings is selected from the Settings menu. Use routing profiles to choose how the Spotter GPS Navigator routes you on your journey.






Text-to-Speech help is enabled by default. To remove the Text-to-Speech help function:

- Tap **Menu** >  > **Settings** >  >  >  >  > **Routing Profiles**.
- Select a routing profile from the Select Routing Profile list or create new routing profile. See page 29 for instructions on creating a new routing profile.

GPS TRACK PLAYBACK








This option is only visible when Show More Settings is selected from the Settings menu. The Spotter GPS Navigator automatically records your journeys as GPS Track files. To playback a previously completed journey:

- Tap **Menu** >  > **Settings** >  >  >  >  > **GPS Track Playback**.
- Select a track from the list by tapping on it, then tap **PLAY**. See page 37 to demo playback instructions.

DATA REGION



This option is only visible when Show More Settings is selected from the Settings menu. If you have maps for various regions, you can choose which maps to use depending on where you're travelling. (Currently only North American Data is available.)

- Tap **Menu** >  > **Settings** >  >  >  >  > **Data Region**.
- Tap **Data Region**.
- Tap **OK** to apply the settings and return to the Settings menu.

LICENSING




This option is only visible when Show More Settings is selected from the Settings menu. Use this option to access the licensing information of your CoPilot software. The licensing settings allow you to activate/deactivate license regions. (Currently only North American Data is available.)

- Tap **Menu** >  > **Settings** >  >  >  >  > **Licensing**.

SAVE CURRENT LOCATION

You can save your current GPS location as a destination so you can enter it quickly next time.


- Tap **Menu** >  > **Save Current Location**.
- Enter a name for the location you are saving and tap **OK**.

The location will be saved in your Favorites list.

NOTE: A GPS fix is required to save current location.

DELETE NEXT STOP

Once you have planned a route and selected **GO** to start navigating, you may decide not to go on to your next planned destination. To delete the next destination on your journey:

- Tap **Menu** >  > **Delete Next Stop**.
- A pop up window will open asking if you are sure. Tap **Yes** to delete next stop or **No** to cancel.

TIPS & TRICKS

The Spotter GPS Navigator is full of great features. To help you get to know them, we have included Tips and Tricks when you launch your Spotter GPS Navigator the first time.

Additional information for CoPilot Live is available on the web at www.copilotlive.com/support. To find the online address easily:

- Tap **Menu** >  >  > **Tips & Tricks**.

MAPSURE™

Stay up to date with MapSure™. CoPilot's MapSure service keeps you up to date with changes in the highway network by providing you with free updated maps of the USA once per quarter.

MAPSURE™ UPDATES

You can download the latest map update to your Spotter GPS Navigator via a desktop computer using a free software program called CoPilot Central. Please visit www.rightwaygps.com and click on the ALK's MapSure™ quick link to install this software and for more information.

REPORT ROAD CHANGES

With MapSure™, you can also report changes and improvements to the road network which will be verified and added to the quarterly map updates. Visit www.alk.com/maps/ to report a map change or update.

IN USE

ETAS AND DISTANCES

The estimated time of arrival (ETA) and the distance remaining are displayed on the right of the screen regardless of the driving view you have selected.



What are These?



Car
Routing
Power
Charge

GPS Status:
Green=3D fix
Yellow=Fair
Red=No fix



FOR YOUR SAFETY

The Spotter GPS Navigator is designed as a tool to get you from Point A to Point B along the most efficient routes. However, some of the information in the database may change from time to time.

You must stay alert and pay attention to road signs at all times.

 
VIEWING BONUS CONTENT

Your Spotter includes bonus videos and pictures of Dale Jr. You may view these from the main menu.

To view pictures:

- At the main menu, press the **Pictures** button in the lower-left.
- Select “ResidentFlash” by pressing it once, then select “Pictures” in the same way.
- You will see a thumbnail list of the pictures. Use the arrows on the right to move up and down the list
- Tap the picture you wish to view. The viewer controls are as follows:



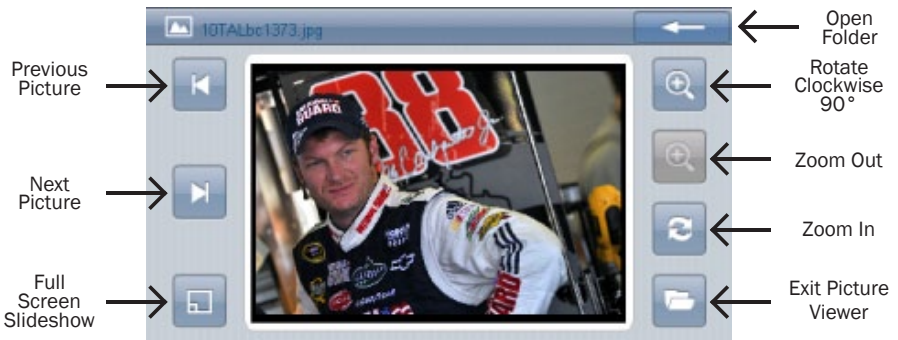

To view videos:

- At the main menu, press the **Videos** button at the bottom-center.
- Select “ResidentFlash” by pressing it once, then select “Videos” in the same way.
- You will see a list of the videos. Tap the one you would like to view. The viewer controls are as follows:



MULTI-MEDIA FEATURES

You may use your Spotter to view videos and pictures stored on a standard memory card. These cards may be purchased at most electronics stores. To save pictures or video to your card, please consult the directions that came with your card.

INSERTING AN SD CARD

- Locate the notched end of your SD card. This end goes in first.
- Locate the SD slot on the right side of the Spotter.
- Insert the SD card gently, notched end first and with the metal connectors toward the front face of the Spotter. Slide the card in until it locks into place.

When the card is locked in place, it will be even with the right edge of the Spotter. Memory cards work best if the metal contacts are clean and undamaged.

VIEWING PICTURES

You may use the Spotter to view pictures in **BMP**, **JPG**, and **GIF** format.

- Load the pictures onto an SD card.
- Insert the SD card into the Spotter.
- Press the **Pictures** button on the main menu to load the picture viewer.
- You will see a list of your pictures, with filenames and thumbnail views of the pictures. If necessary, use the arrows on the right side to scroll up and down the list of pictures.
- Tap directly on a picture to load it.

VIEWING VIDEO

You may use the Spotter to view videos in **MP4, 3GP, WMV, AVI, and DIVX format.**

- Load the videos onto an SD card.
- Insert the SD card into the Spotter.
- Press the **Videos** button on the main menu to load the picture viewer.
- You will see a list of your videos, with filenames and thumbnail views of the videos. If necessary, use the arrows on the right side to scroll up and down the list of videos.
- Tap directly on a video to load it.

SETTINGS MENU

The Spotter GPS Navigator can be customized to meet your individual needs and style.

LANGUAGE

Click on the national flag corresponding to the desired language. The system will automatically save and return to the menu.

BACKLIGHT

The backlight feature enables you to adjust the brightness of the screen and designate the length of time to wait before shutting down the backlight. Once the backlight has gone off, you may tap the screen to restore it.

POWER

The Power button allows you to see the battery status and adjust the length of the stand-by time to meet your needs.

SOUND

Sound allows you to adjust the volume of the unit as well as the screen sound made when a button is tapped.

TIME

The Time button enables you to modify the date, the time, and select your time zone.

SYSTEM

The System button enables you to view information specific to your unit, such as available memory, and to re-calibrate the touch screen.

TROUBLE SHOOTING

WHY WON'T MY UNIT TURN ON?

Check the power. Does the battery need to be charged? Plug into a power source and then try to turn on the device. Make sure to hold the power button for 4 seconds when powering on.

WHY AM I UNABLE TO GET A GPS SIGNAL OR FIX?

The very first time you use the Spotter GPS navigator, it can take up to 10 minutes to initialize the GPS. After the first time, GPS reception should start within 1 minute of turning on the device. If the navigation device has been switched off for more than 1 week, the next initialization can take up to 5 minutes. For the GPS to properly receive satellite data it needs a clear view of the sky. The most common limitations to receiving GPS signals are urban canyons, tunnels and metallic surfaces. Most of the time, this isn't an issue. If you are experiencing difficulty, place your unit near the rearview mirror.

WHY DOES MY UNIT SOMETIMES MAKE A POPPING OR STATIC LIKE NOISE?

The popping/static noise comes from interference with cell phones. It doesn't impact the unit or its performance. If the occasional noise is bothersome, either turn the cell phone off or move the unit further away from the phone.

ALTHOUGH I AM RECEIVING TURN-BY-TURN INSTRUCTIONS ON SCREEN, IT IS NOT SPEAKING TO ME. WHY IS THAT?

Check that the volume on your GPS is turned up. Go to **Menu > Settings > Sound**. If the volume is okay, check **Settings > Language & Voice** to verify your voice selected is a full-text voice. This is noted by an * next to the voice name.

WHY DOES MY UNIT SOMETIMES MISS ANNOUNCING THE STREET NAME?

You can change the turn warning by going to **Settings > Guidance > Choose when you want the device to speak the turn**. Also check **Settings > Language & Voice** to verify your voice selected is a full-text voice. This is noted by an * next to the voice name.

MY DEVICE PROVIDED ME A ROUTE THAT WAS DIFFERENT THAN THE ONE I WOULD ORDINARILY EXPECT THE SYSTEM TO SELECT. WHY?

GPS navigators rely on the quality of navigation software and maps, and the complex interaction between them. The Route Profile setting determines the routing. The Quickest Route setting relies on fast roads such as interstates and highways. This is not necessarily the shortest route. The Shortest Route setting relies on the shortest distance between two points, which may or may not be the fastest.

**ADDITIONAL FAQs CAN BE FOUND ON
WWW.RIGHTWAYGPS.COM.**

SPECIFICATIONS

| Navigation Features | Physical & Performances | Memory & Maps |
|---|---|---|
| Detailed Street Maps of USA | Dimensions: 5 x 3.4 x .75 in | Processor: Sift Atlas IV |
| Voice Prompts (e.g. "in 1 mile, turn right") | Weight: 8 oz. | Operating System: Windows CE.NET 6.0 |
| Street Name Text-to-Speech (e.g. "Turn right on 1st Avenue") | Display Size: 4.3 in. | Memory: 128 MB RAM 2 GB NandFlash Memory Card Slot |
| ClearTurn™ (on major highways) | Display Resolution: 480 x 272 pixels | ALK Map Data |
| Lane Assist (on major highways) | Screen Type: Anti-glare | Preloaded Maps: United States |
| Destination Entry by Address, Coordinates, Zip Code, Intersection, POI, Map location, or saved Favorites | LCD Touch Screen | Ability to Add Maps |
| Multiple Driving Views: 2D, 3D, Driver Safety, and Itinerary | Battery:Li-ion Rechargeable | Create & Save Multi- destination Routes |
| Choice of Route Set-Up | GPS Module: SiRF Atlas IV | |
| Automatic Re-Route | Audio Out: Built-in Speaker | |
| Route/Road Avoidance Options | Earphone Jack | |
| Over 1 Million Points of Interest | RoHS Compliant | |
| Downloadable Map Updates | | |

SUPPORT

CUSTOMER SERVICE

At RightWay we believe that the customer deserves the best possible service and support. We look forward to assisting you in making the most of your RightWay product.

For issues related to the Spotter GPS Navigator please send an e-mail to **support@rightwaygps.com** or call **(507) 529-1441**.

Our support team is available Monday to Friday
8:30 AM to 4:30 PM CST

All e-mails will be answered within 1-2 business days.

Alternatively, Visit the support section at www.rightwaygps.com for Frequently Asked Questions (FAQs) and additional information.

REGISTER YOUR SPOTTER GPS NAVIGATOR

Register your Spotter GPS Navigator solution at **www.rightwaygps.com**.

SAFETY & WARRANTY INFO

SAFETY INFORMATION

Use this navigation system at your own risk.

Caution!

- To prevent accidents, do not operate the navigation system while driving
- Do not look at the display unless it is absolutely safe to do so!
- Traffic regulations have priority over any instructions from the navigation system.
- Follow the instructions of the navigation system only when the circumstances and the road traffic regulations allow you to do so! The navigation system guides you to your destination even if you deviate from the calculated route.
- Check that the unit is secured in the mount and adjusted properly before each journey.
- The United States government operates the Global Positioning System (GPS) and is solely responsible for its accuracy and maintenance. Changes by the United States government may affect the accuracy and performance of all GPS equipment, including your personal navigation device.
- Ordinances or laws may restrict use of certain abilities of your navigation device on public or private land.

Care & Safe Keeping of the Spotter GPS Navigator

- Protect the unit from moisture. It is not waterproof and is not protected against water damage. The warranty does not cover water damage.
- Do not open the unit's casing under any circumstances. **This will void your warranty!**

- Do not attempt to replace the battery. For problems related to the battery, contact Customer Support.
- Do not expose the unit to extreme heat or cold. This may damage the device or impair its function.
- Use only the charger provided or one that has been approved by the manufacturer.
- To clean the screen of the Spotter GPS Navigator, use a dry cloth. Paper towels will scratch the screen.

Liability

RightWay GPS, its dealers, suppliers and distributors disclaim all liability for any use of this product in any way that may cause accidents, damage or that may violate the law.

RightWay GPS, its dealers, suppliers and distributors disclaim all liability for any use of this product in delivering medical aid, transporting of medical patients and/or equipment, or transporting medical emergency victims. Do NOT use this product during the time of local, state or national emergencies. If you wish to obtain versions of a navigation system optimized for us in medical emergencies, please contact Noetic.

When using navigation aids, both hardware and software, in a vehicle, it is your sole responsibility to place, secure, and use these aids in a manner that will not cause accidents, personal injury, or property damage, or in any manner obstruct your view. You, the user of this product, are solely responsible for observing safe driving practices.

End User's License Agreement

END-USER LICENSE AGREEMENT FOR COPILOT® SOFTWARE Please read the following agreement ("License") carefully.

Acceptance: Installation or use of the enclosed ALK Technologies, Inc. ("ALK") software (the "Software") on your device constitutes your acceptance of these terms. If you do not agree to the terms of this License, you must immediately delete the Software from your device and destroy any copies you made of the Software and of any written materials relating to the Software, and promptly return the Software and, if bought as part of a package, any associated devices to your retailer for a refund.

License: ALK grants you, as an individual, a non-exclusive, non-transferable right and license to install and use one copy of the Software on a single device at a time. If your Software includes CoPilot Central, you may install and use the CoPilot Central portion on a different device than the CoPilot portion. Your license to use the Software is subject to you complying with the terms of this License. A license is required for each installation of the Software, unless the Software is (i) installed

temporarily on a computer during the repair or maintenance of the device on which the Software is normally installed and (ii) is immediately deleted from such device as soon as those repairs or maintenance are complete. You may make one copy of the Software for backup purposes only.

Copyright: United States copyright law and international treaty provisions protect the Software. You agree that no title to the intellectual property in the Software is transferred to you. You further acknowledge that title and ownership rights will remain the exclusive property of ALK, and you will not acquire any rights to the Software except as expressly set out in this license. You agree that any copies of the Software will contain the same proprietary notices that appear on and in the Software. **Prohibited Use:** Unless you have ALK's prior written permission, you may not (i) use, copy, modify, alter, or transfer the Software or accompanying documentation, except as expressly permitted in this License; (ii) translate, disassemble, decompile, or reverse engineer the Software (iii) sublicense or lease the Software or its documentation; or (iv) use the Software in a multi-user or networked environment or on a rental basis or in a time-sharing or computer service business.

Limited Warranty: ALK warrants that the Software will perform substantially in accordance with the accompanying written materials for a period of 30 days from the date of purchase. Any implied warranties relating to the Software are limited to such 30 day period provided that limitation is permitted by applicable law.

End-User Remedies: If the Software does not conform to the "Limited Warranty" above, ALK's entire liability and your sole and exclusive remedy will be, at ALK's option, either to (i) correct the error, or (ii) help you work around the error, or (iii) accept a return and issue a refund through your retailer. The Limited Warranty is void if failure of the Software has resulted from your fault, abuse, or misapplication. If we correct an error in the Software for you, then the unexpired portion of the Limited Warranty period as at the date you informed us of the error will apply to the corrected software once you have received the corrected version. **NO OTHER WARRANTIES: EXCEPT AS SET OUT IN THE LIMITED WARRANTY, ALK DOES NOT WARRANT THAT THE SOFTWARE IS ERROR FREE. ALK DISCLAIMS ALL OTHER WARRANTIES WITH RESPECT TO THE SOFTWARE, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS.** Some jurisdictions do not allow the exclusion of implied warranties or limits on how long an implied warranty may last, or an exclusion of incidental damages. This means the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights depending on your country. **No Liability for indirect loss:** In no event will ALK be liable to you for any loss of profit, wasted time, lost business or for any incidental, or indirect loss of any kind arising out of the performance or use of the Software, even if ALK has been advised of the possibility of such damages.

Termination: Without prejudice to its other rights, ALK may terminate this License if you fail to comply with these terms and conditions. In that situation, you must destroy all copies of the Software.

Limitations on Export: You hereby expressly agree not to export or re-export the Software, in whole or in part, in violation of any export laws or regulations of the United States. **DISCLOSURE FOR PRODUCTS CONTAINING CANADIAN POSTAL CODE AND/OR CANADIAN STREET-LEVEL DATA:** Based on Computer File(s) licensed from Statistics Canada. © Copyright, HER MAJESTY THE QUEEN IN RIGHT OF CANADA, as represented by the Minister of Industry, Statistics Canada 2003. ALK Technologies, Inc. is an Authorized User of selected Statistics Canada Computer File(s) and Distributor of derived Information Products under Licensing Agreement 6147. No confidential information about an

individual, family, household, organization or business has been obtained from Statistics Canada.

U.S. Government Restricted Rights: The Software is provided with restricted and limited rights. Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in the appropriate subparagraphs of the Commercial Computer – Restricted Rights clause at 48 C.F.R. 52.227-19 or in the appropriate subparagraphs of the Rights in Technical Data and Computer Software clause at 252.227-7013 of the Defense Federal Acquisition Regulations. The Copyright to the Software is held by ALK Technologies, Inc., 1000 Herrontown Road, Princeton, NJ 08540 USA. Choice of Law: This License is governed by the laws of England.

END USER LICENSE FOR SPEECH PLAYBACK: Please read the following agreement (“License”) carefully.

This license applies to the speech playback function included in your Software, if any. Copyright (c) 2002, Xiph.org Foundation. Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Personal Use Only. You agree to use this Data together with COPILOT for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws.

Restrictions. Except where you have been specifically licensed to do so by ALK, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you “as is,” and you agree to use it at your own risk. ALK and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: ALK AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: ALK AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF ALK OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement. These terms and conditions constitute the entire agreement between ALK (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the Netherlands, without giving effect to (i) its conflict of law’s provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the Netherlands for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Restrictions. Except where you have been specifically licensed to do so by ALK, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you “as is,” and you agree to use it at your own risk. ALK and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: ALK AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: ALK AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF ALK OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Noetic, Inc. Limited Warranty

Hardware: Noetic, Inc. warrants to the original end user (i.e. Customer) that this product will be free from defects in workmanship and materials, for one year from the date of original purchase from Noetic, Inc. The provisions of this warranty shall not apply if, in Noetic, Inc.'s judgment, the product has been subject to misuse or neglect, improper installation, damaged in an accident, or repaired or altered in any way that adversely affects its performance and reliability. Noetic, Inc.'s sole obligation under this express warranty shall be, at Noetic, Inc.'s option, to replace the product or part with a comparable product or part, repair the product or part, or if neither repair nor replacement is reasonably available, Noetic, Inc. may, in its sole discretion, refund to Customer the purchase price paid for the product or part. Replacement products or parts may be new or reconditioned. Noetic, Inc. warrants any replaced or repaired product or part, and any hardware upgrade to which Customer is entitled under an agreement between Customer and Noetic, Inc. for a period of ninety (90) days from shipment, or through the end of the original warranty, whichever is longer. All products or parts that are replaced become the property of Noetic, Inc. This warranty does not cover products sold AS IS or WITH ALL FAULTS.

Obtaining Warranty Service: Customer must contact Noetic, Inc. within the applicable warranty period to obtain warranty service authorization. Dated proof of original purchase from Noetic, Inc. or its authorized reseller will be required. Noetic, Inc. is not responsible for Customer products or parts

received without a warranty service authorization. Products or parts shipped by Customer to Noetic, Inc. must be sent prepaid and packaged appropriately for safe shipment, and it is recommended that they be insured or sent by a method that provides for tracking of the package. THIS WARRANTY SHALL NOT BE EXTENDED, ALTERED OR VARIED EXCEPT BY A WRITTEN INSTRUMENT DULY SIGNED BY NOETIC, INC. WARRANTIES EXCLUSIVE. IF THIS PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPLACEMENT OR REPAIR OF THE PRODUCT OR PART OR REFUND OF THE PURCHASE PRICE PAID, AT NOETIC, INC.'S DISCRETION. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES (OR CONDITIONS), EXPRESSED OR IMPLIED, INCLUDING (WITHOUT LIMITATION), ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR A PARTICULAR PURPOSE. NOETIC, INC. SHALL NOT BE LIABLE FOR LOSS OF PROFITS OR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES WHICH THE PURCHASER MAY SUSTAIN. IN NO EVENT SHALL NOETIC, INC.'S LIABILITY EXCEED THE PURCHASE PRICE OF THE DEFECTIVE PRODUCT. NOETIC, INC. NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. NOETIC, INC. SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, 25 UNAUTHORIZED ATTEMPTS TO OPEN, REPAIR, OR MODIFY THE PRODUCT, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OTHER HAZARDS, OR ACTS OF GOD. THIS WARRANTY DOES NOT COVER PHYSICAL DAMAGE TO THE SURFACE OF THE PRODUCT, INCLUDING CRACKS OR SCRATCHES ON OUTSIDE CASING. THIS WARRANTY DOES NOT APPLY WHEN THE MALFUNCTION RESULTS FROM THE USE OF THIS PRODUCT IN CONJUNCTION WITH ACCESSORIES, OTHER PRODUCTS, OR ANCILLARY OR PERIPHERAL EQUIPMENT AND NOETIC, INC. DETERMINES THAT THERE IS NO FAULT WITH THE PRODUCT ITSELF. THIS WARRANTY DOES NOT APPLY TO ANY MALFUNCTION OR FAILURE OF THE PRODUCT OR PART DUE TO ANY COMMUNICATION SERVICE CUSTOMER MAY SUBSCRIBE TO OR USE WITH THE PRODUCT.

Limitation of Liability: TO THE FULL EXTENT ALLOWED BY LAW, NOETIC, INC. ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THIS PRODUCT, EVEN IF NOETIC, INC. OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPLACEMENT, REPAIR, OR REFUND OF THE PURCHASE PRICE PAID, AT NOETIC, INC.'S DISCRETION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HERE-IN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Disclaimer: Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

Governing Law: This Limited Warranty shall be governed by the laws of the State of Minnesota, U.S.A. excluding its conflicts of laws principles and excluding the United Nations Convention on Contracts for the International Sale of Goods.

FCC Part 15 Compliance Statement

This device is in conformance with Part 15 of the FCC Rules and Regulations for Information Technology Equipment. Operation of this product is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

INDEX

| | | | |
|-------------------------------|-------|--------------------------------|-------|
| 2D DESTINATION | 28 | EDIT STOP POP-UP MENU | 20 |
| 2D NEXT TURN | 27 | ENTERING MULTIPLE DESTINATIONS | 19 |
| 2D VIEW | 26 | END DETOUR | 18 |
| 3D VIEW | 25 | ETAS AND DISTANCES | 46 |
| ABOUT COPILOT | 38 | EULA | 57-63 |
| ADD NEW FAVORITE | 16 | FAVORITES | 16 |
| ADD TO FAVORITES | 22 | FIRST-TIME POSITION FIX | 6 |
| ADDRESS | 10 | FIRST-TIME SETUP | 6-8 |
| ADVANCED SETTINGS | 21-44 | FUEL COSTS ESTIMATE | 24 |
| ALTERNATE ROUTE | 17 | GPS | 32 |
| ATTACHING THE MOUNT | 4 | GPS POINTER | 31 |
| AVOID ROADS | 18 | GPS TRACK PLAYBACK | 44 |
| BACKLIGHT | 35 | GUIDANCE | 42 |
| CHANGE TRIP ORDER | 20 | HOME | 14 |
| CLEAR A PLANNED TRIP | 23 | IN DIFFERENT CITY | 12 |
| CLEAR AVOIDED ROADS | 18 | IN THE BOX | 6 |
| CLEARTURN™ | 34 | INFO BAR | 35 |
| CONNECTING THE CAR CHARGER | 5 | INSERTING AN SD CARD | 49 |
| CONNECTING THE MINI USB CABLE | 6 | INTERSECTION | 13 |
| COORDINATES | 14 | IN USE | 46-47 |
| CUSTOMER SERVICE | 55 | LANGUAGE | 50 |
| CUSTOMIZING YOUR TRIP | 22 | LANGUAGE & VOICE | 34 |
| DATA REGION | 44 | LICENSING | 44 |
| DAY MAP/NIGHT MAP | 28 | LOAD SAVED TRIP | 23 |
| DAY/NIGHT MODE | 35 | LOCATE POINTS OF INTEREST | 11 |
| DELETE SAVED PLANNED TRIP | 24 | MANAGE POIS | 40 |
| DELETE NEXT STOP | 45 | MAP DISPLAY | 30 |
| DESTINATION | 10-14 | MAP STYLES | 30 |
| DETACHING THE MOUNT | 5 | MAPSURE™ | 46 |
| DETOUR | 17-18 | MAPSURE™ UPDATES | 46 |
| DRIVER SAFETY | 26 | MOUNTING SPOTTER GPS NAVIGATOR | 4-6 |
| DRIVING VIEWS | 25-28 | MULTI-MEDIA FEATURES | 49-50 |

| | | | |
|-------------------------------------|-------|-----------------------|-------|
| MY PLACES | 14-16 | SOUND | 37 |
| NEARBY | 11 | SPECIFICATIONS | 54 |
| ON MY ROUTE | 12 | SPEECH | 43 |
| ON SCREEN INFORMATION | 9 | SUPPORT | 55 |
| OPTIMIZE STOPS | 24 | SWITCHING ON AND OFF | 6 |
| PICK ON MAP | 13 | SYSTEM | 51 |
| PLAN OR EDIT A TRIP | 19-25 | TAKE BREAKS | 25 |
| PLAY DEMO | 37 | TIME | 51 |
| POI ALERTS | 40 | TIME ZONE | 37 |
| POI DISPLAY | 33 | TIPS & TRICKS | 45-46 |
| POWER | 51 | TROUBLE SHOOTING | 51-53 |
| PREPARING SPOTTER | 6 | TURN WARNINGS | 33 |
| QUICK STOP | 16-17 | UNITS OF MEASURE | 35 |
| RECENT | 16 | VIEWING BONUS CONTENT | 47-48 |
| REGISTER YOUR SPOTTER GPS NAVIGATOR | 55 | VIEWING PICTURES | 49 |
| REPORT ROAD CHANGES | 46 | VIEWING VIDEO | 50 |
| RESTORE DEFAULT SETTINGS | 38 | WORK | 15 |
| ROUTING | 29 | | |
| ROUTING PROFILES | 43 | | |
| SAFETY INFORMATION | 56 | | |
| SAFETY & WARRANTY INFO | 46-57 | | |
| SAVE CURRENT TRIP | 45 | | |
| SAVE TRIP | 22 | | |
| SEND TO LOCATION | 22 | | |
| SET AS WAYPOINT | 21 | | |
| SETTINGS | 29-39 | | |
| SETTINGS MENU | 50-51 | | |
| SET UP COPILOT | 6 | | |
| SHOW MORE SETTINGS | 39 | | |
| SHOW ON MAP | 22 | | |
| SHOW ROUTE | 23 | | |

SPOTTER™



Copyright 2010 © RightWay GPS. All rights reserved. RightWay® is a registered trademark of Transplant GPS, Inc.

NASCAR is a registered trademark of The National Association for Stock Car Auto Racing, Inc.

©2010 Hendrick Motorsports, LLC. The name, likeness and signature of Dale Earnhardt, Jr. and the likeness of the #88 Amp Energy / National Guard Chevrolet are used with the permission of Hendrick Motorsports, LLC and JR Motorsports, LLC. AMP ENERGY is a trademark of PepsiCo, Inc.